

WE OUTFIT THE WEST WITH SLATWALL PANELING

Spacewall West, Inc.

www.spacewallwest.com

CALIFORNIA

Tel: 714.961.1300

800.643.4952

Fax: 714.961.0976

350 East Crowther Avenue
Placentia, California 92870


WASHINGTON

Tel: 253.852.0203

800.433.7099


Fax: 253.852.0204

25315 74th Avenue S. Ste. 102
Kent, Washington 98032

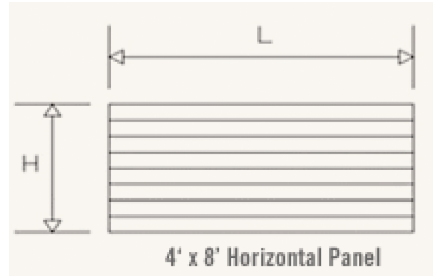

Why choose horizontal slatwall?

Minimizes your "visible seams" when installing slatwall; our horizontally cut panels have a 1/2 groove on the top of and bottom of each sheet. By stacking one sheet on top of another, the seam stays hidden when the two 1/2 grooves meet to form one slatwall groove.

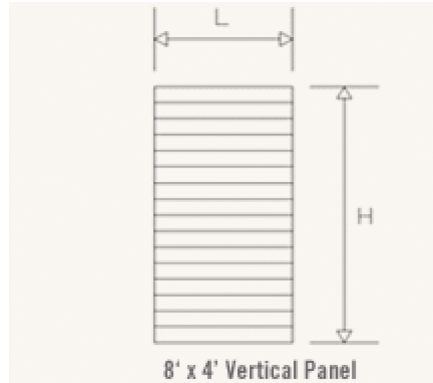

Why choose vertical slatwall?

Advantageous to use when wrapping slatwall around interior columns or when the area needing slatwall is high and narrow. If you have questions, read our slatwall FAQ page.

Standard Sizes: 4'h x 8'w and 8'h x 4'w

Optional Sizes: 5'h x 8'w and 4'h x 10'w – Available Upon Request

